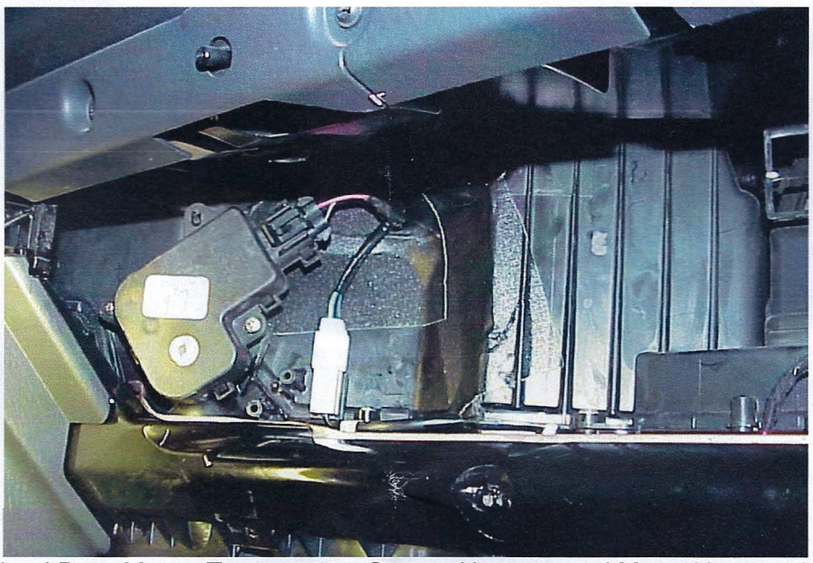

(Figure 10. Blend Door Motor, Temperature Sensor Harness and Motor Harness Installed)

24. Re-set the Automatic Zone Control system; **disconnect the negative battery terminal for 15 seconds and re-connect it.**
25. Test and verify that all system mode settings function. The system should recalibrate and function normally after step 24. Their will no longer be any active codes fault codes.
26. Install the Glove Box Door.
27. With a shop vacuum; clean up all the remaining debris in the vehicle's interior.
28. Reset the radio clock to the correct time.